Preamplifier Repeater Installation Manual



RG-11/U N(M)-F(F) RG-11/U 5-70m AC Adaptor

Screws

Repeater Main Unit

Step 1

Install the Unit by using fastening bracket and screws Connect AC Power Cord, AC Adaptor, and the Unit.

Fastening

Bracket

Step 2

Connect the Unit and RG 11/U coaxial cable by using N(M)-F(F). Adaptor

